

Fig. 1

Channel Changing Class

channel up
channel down
number buttons (0-9)
previous channel
TV/VCR

~ 206

Volume Changing Class

Volume up
Volume down
Mute

~ 204

Power Class

Power
Off
On

~ 202

Transport Class

Play
Stop
Rewind
Fast Forward
Next channel (track, chapter, preset)
Previous Channel (track, chapter, preset)
Record
Pause
Next

~ 208

Control Class

Surround
Display
Menu
Guide
Up
Down
Left
Right
Reset (exit, cancel)

~ 210

Fig. 2

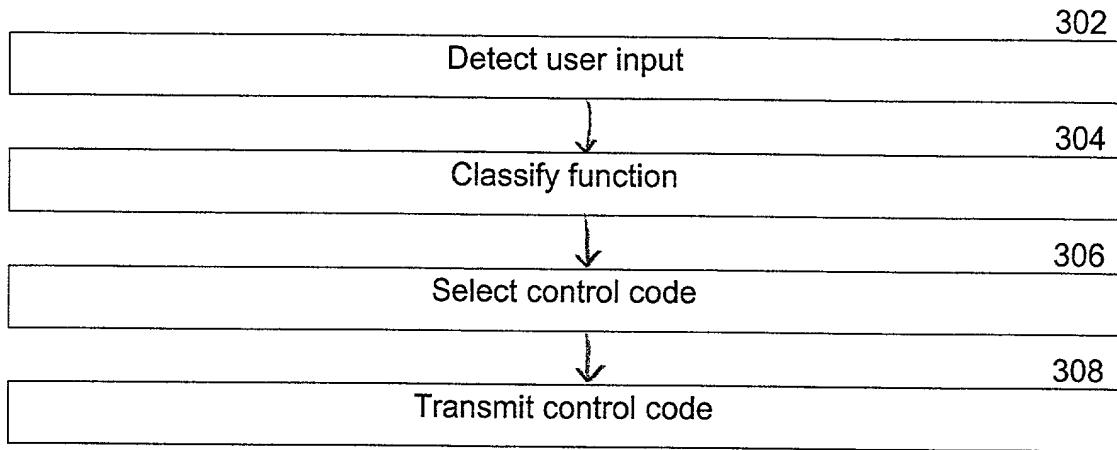


Fig. 3

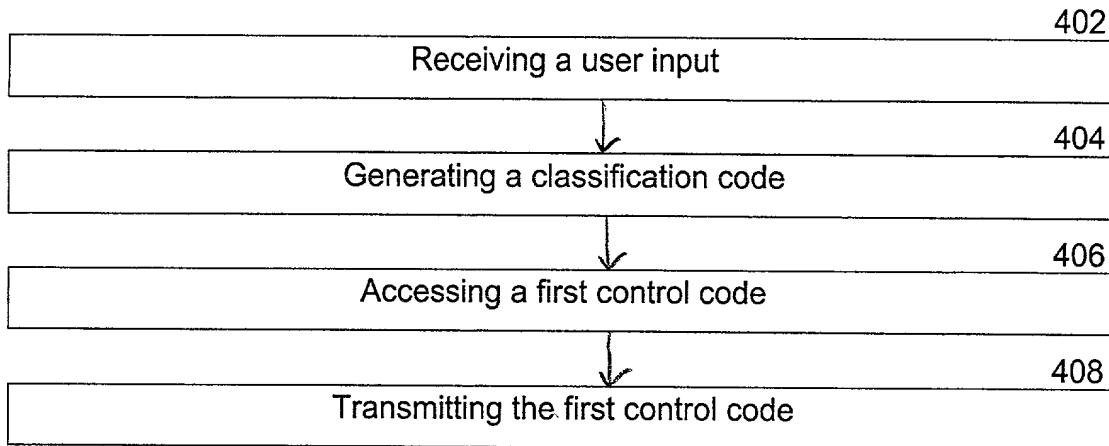


Fig. 4

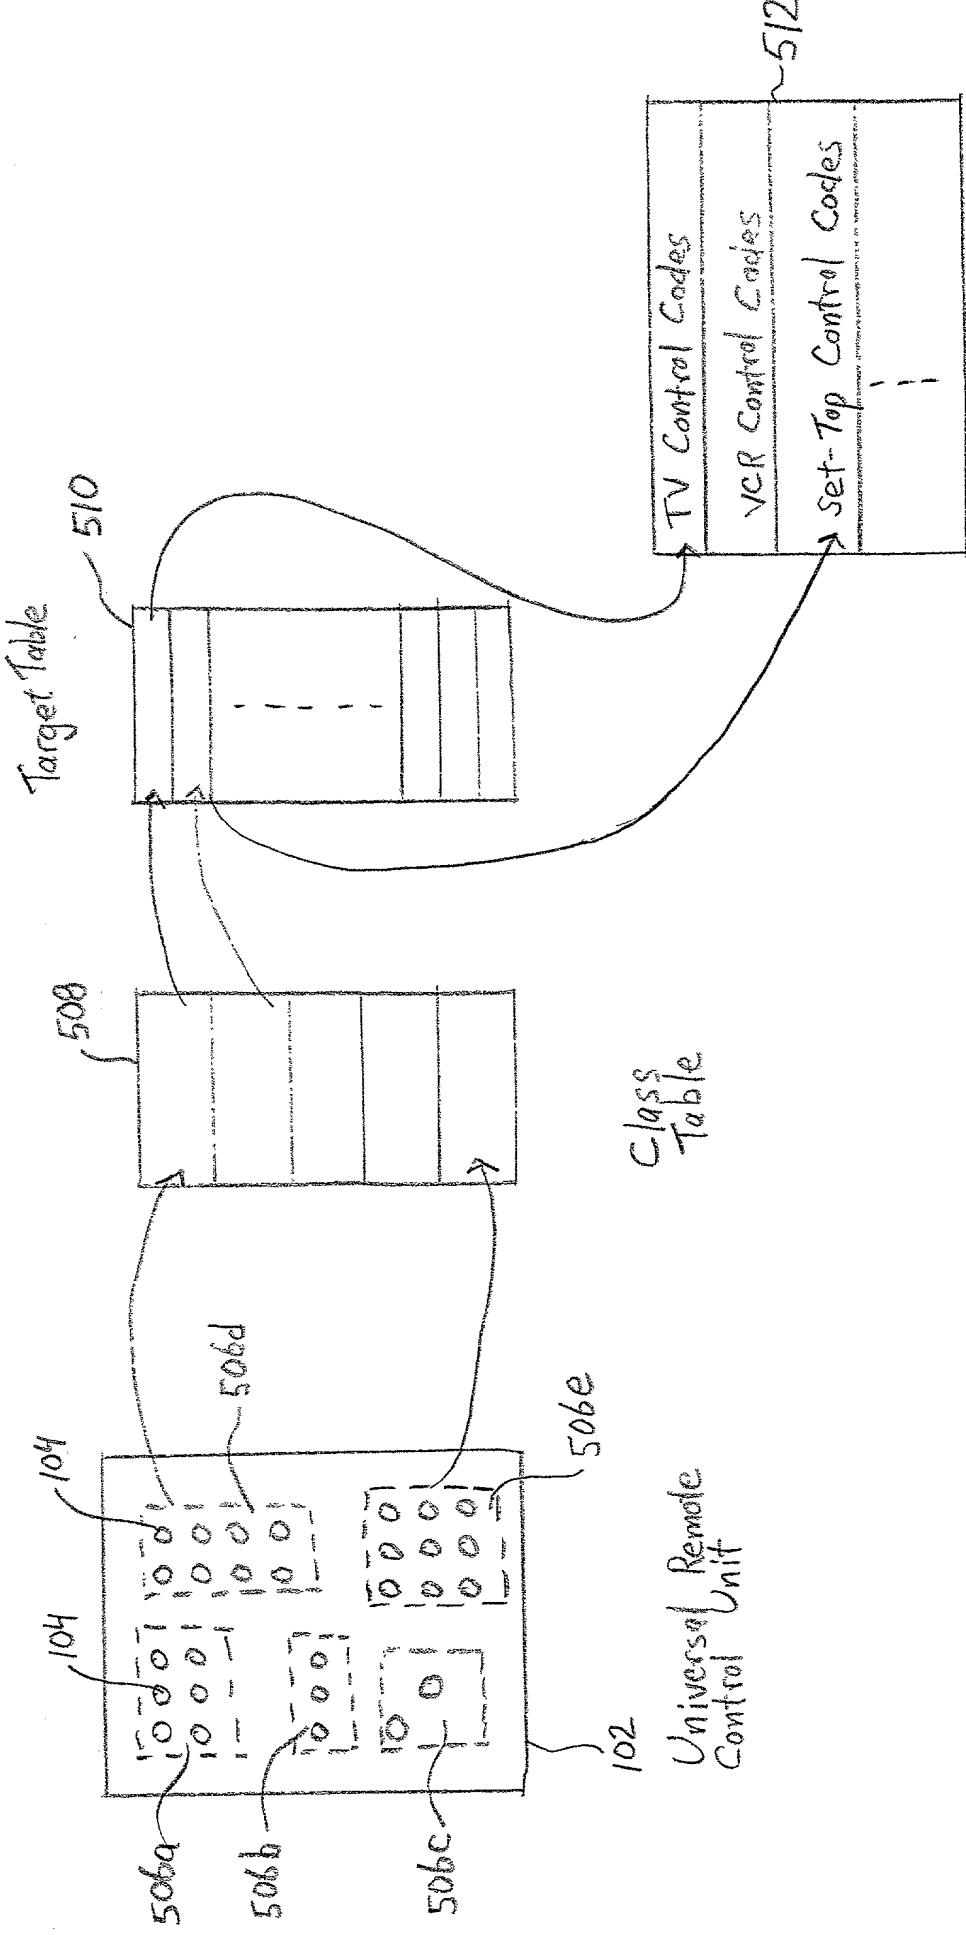
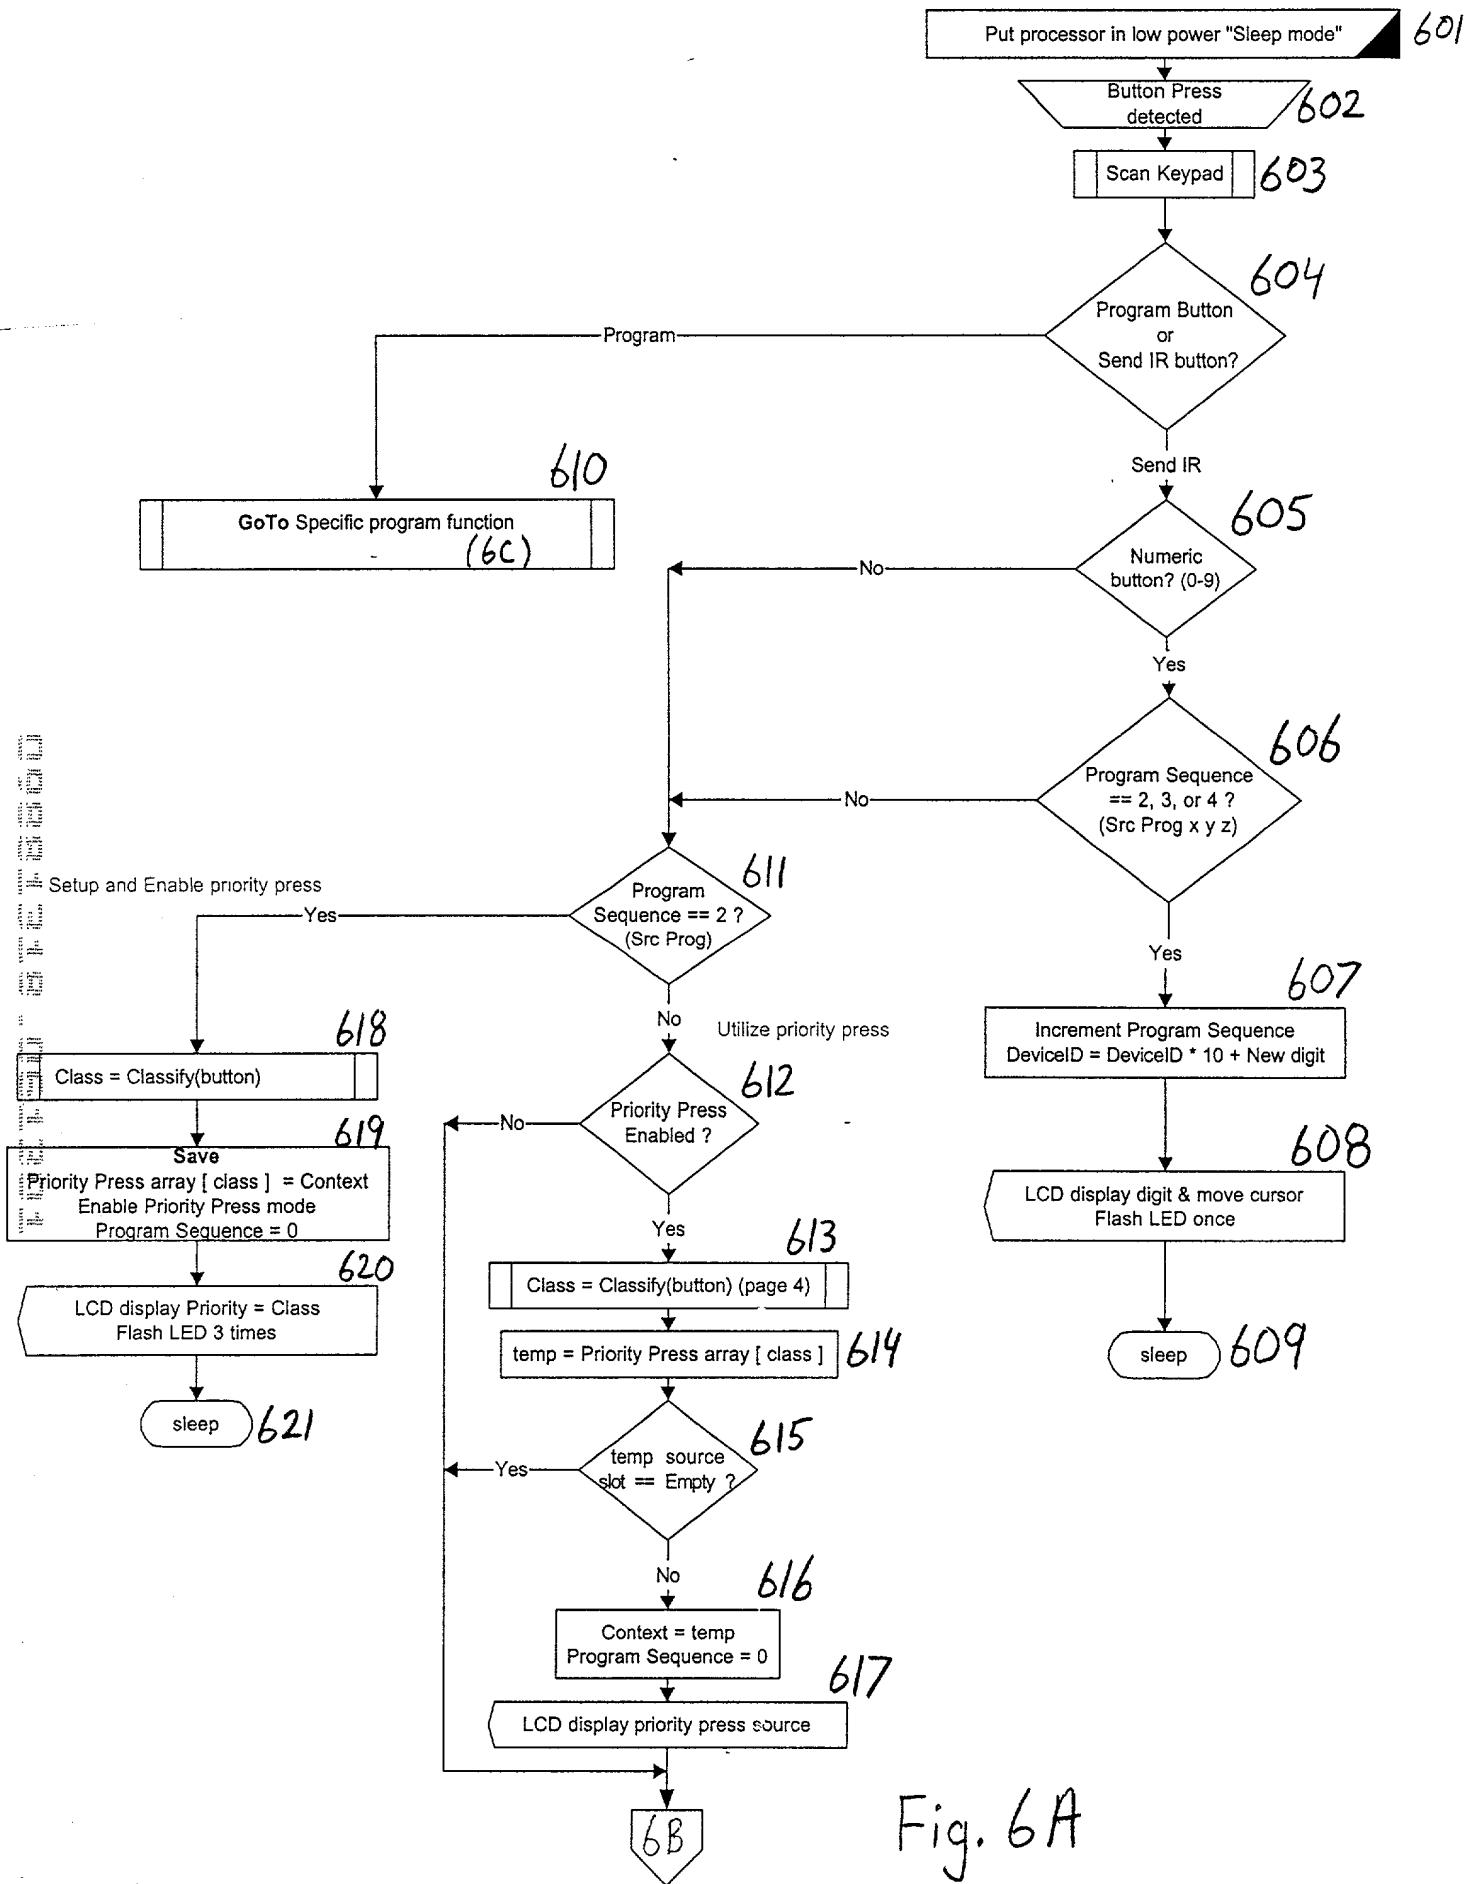


Fig. 5



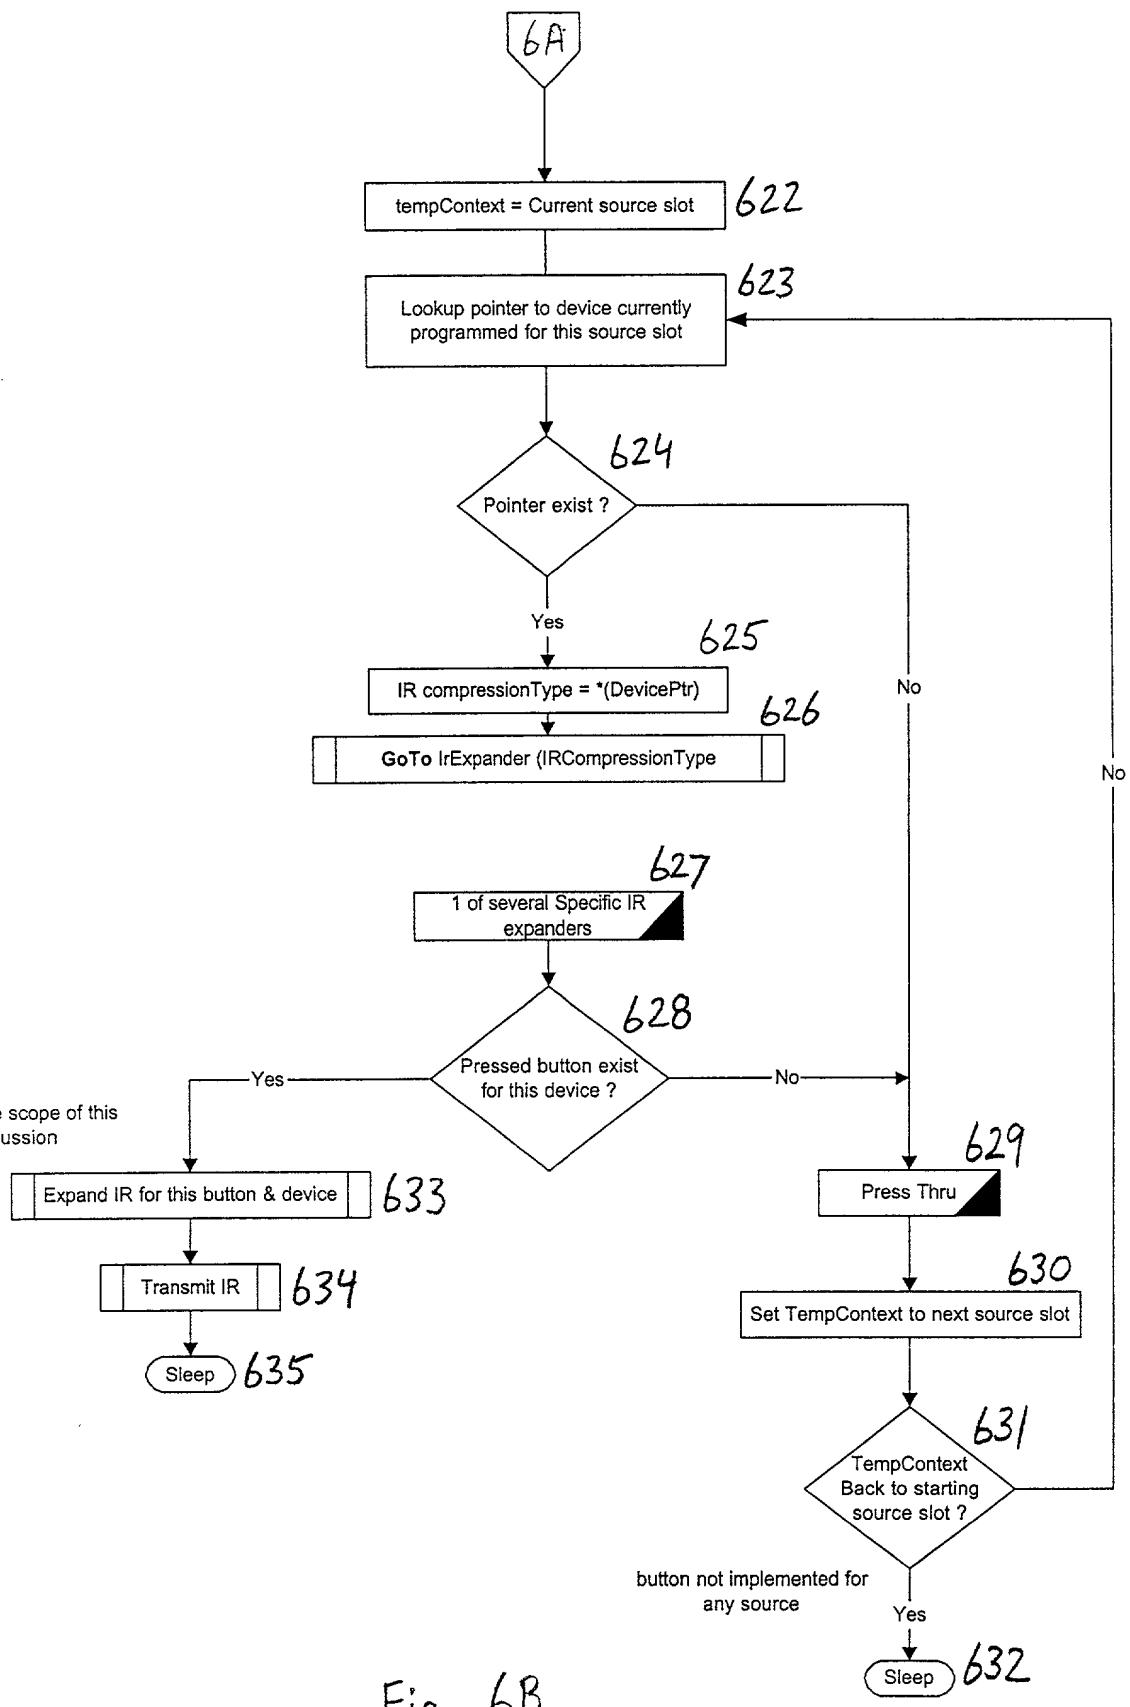
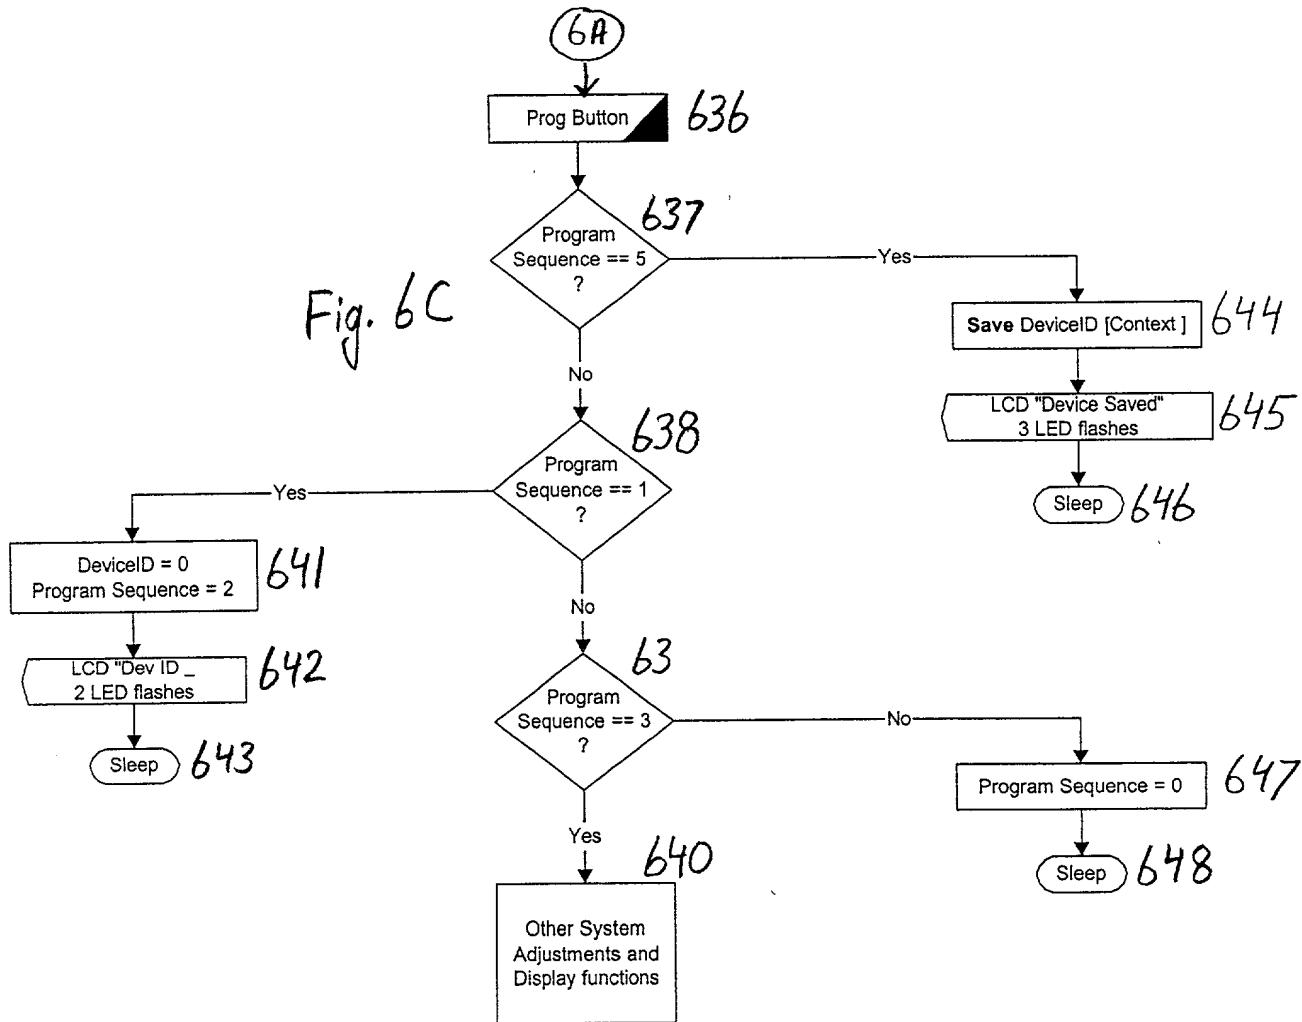


Fig. 6B



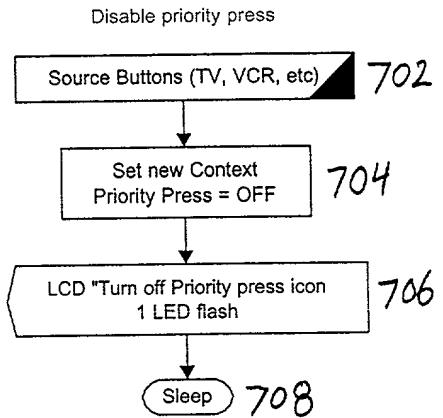


Fig. 7

